Instructions

Tumble dryer StreamLine T 9153 VP

1. Start the display




Press the On/Off button to start the display.

2. Fill the machine



Press the key symbol to open the door.

3. Select program and program options (see program table for more info)

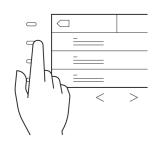

Use to see more programs. Select program and the desired program options by pressing the light bar next to the program name.

Press on to change or cancel a selected program.

4. Start




Close the door. Press the start button.

Cancel

Press the light bar next to 'Cancel' and **hold** until 'End' is i displayed.

5. Clean lint filter

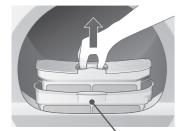







Note! Dubble filters

Programs

Cotton Extra dry For particularly thick or multilayered fabrics

Cotton Cabinet dry For laundry which will not be ironed Easy care Cabinet dry For laundry which will not be ironed

Cotton Light dry

For laundry which will not be ironed or only lightly ironed

Easy care Light dry

For laundry which will not be ironed or only lightly ironed

Cotton Iron damp For garments to be ironed Easy care Iron damp For laundry to be ironed

Easy care Extra dry For particularly thick or multilayered fabrics
Synthetics Cabinet dry Silk, delicates, lingerie, curtains and the likes

Wool finish Tumble dry

Machine washable fabrics made of or containing wool

Sportswear, outdoor Cabinet dry

Sports and leisure jackets, weather gear, ski wear

Terry towels Extra dry
Impregnating Extra dry
Bed linen Cabinet dry
Terry towels, bath towels, bathrobes etc. made of cotton
Newly impregnated sports and leisure jackets, ski wear etc.
Cotton sheets, fitted sheets, duvet covers, pillow cases etc.

Timed drying For extra drying time

Program options

Gentle

The temperature is reduced for gentle drying.

Express

For drying reduced laundry loads or single items

Extends the drying time to remove more bacteria

Time Increases time period by 5 min/push

Change language



Tap the light bar next to the speech bubble. Select desired language.

